
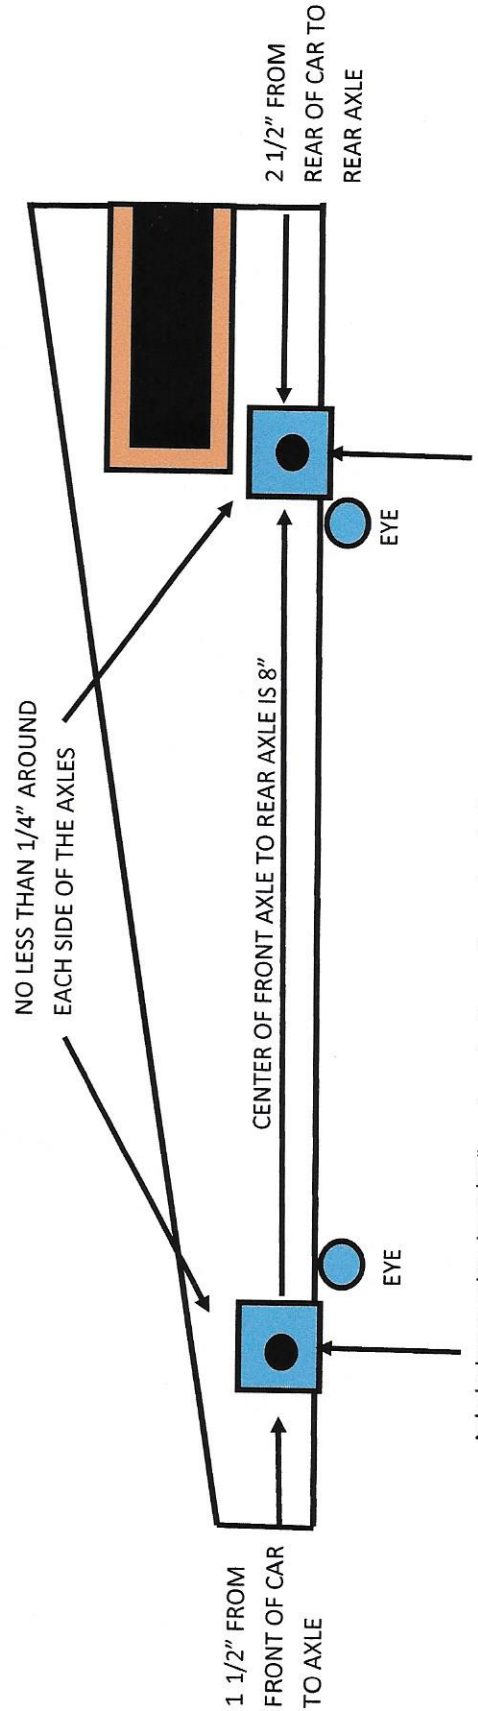


# CO2 CAR DESIGN RULES

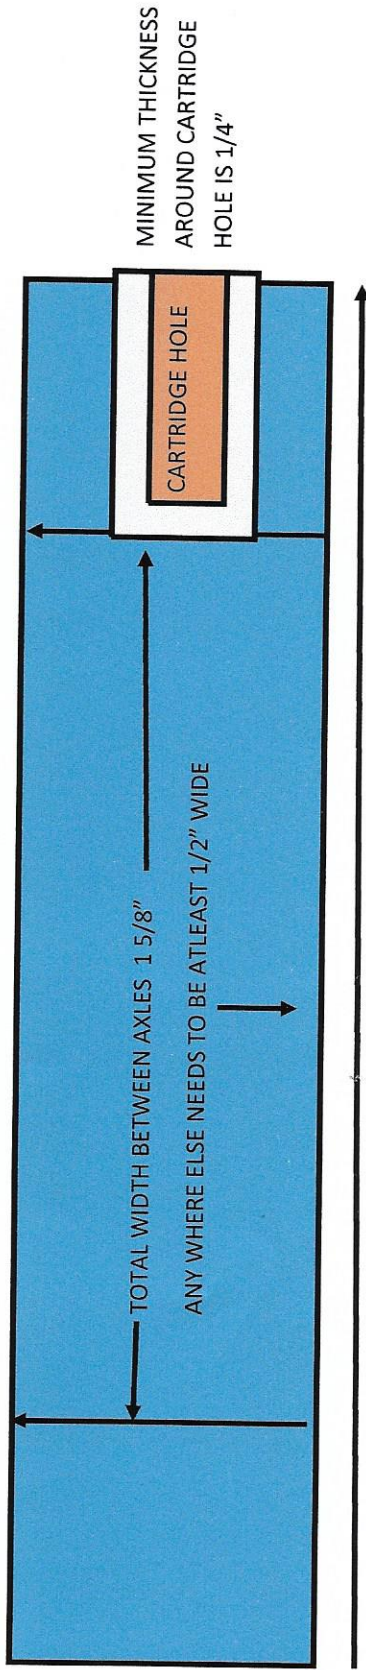

Axle holes need to be  $3/16$ " up from bottom of wood and place eye screws as close as possible to each axle.