
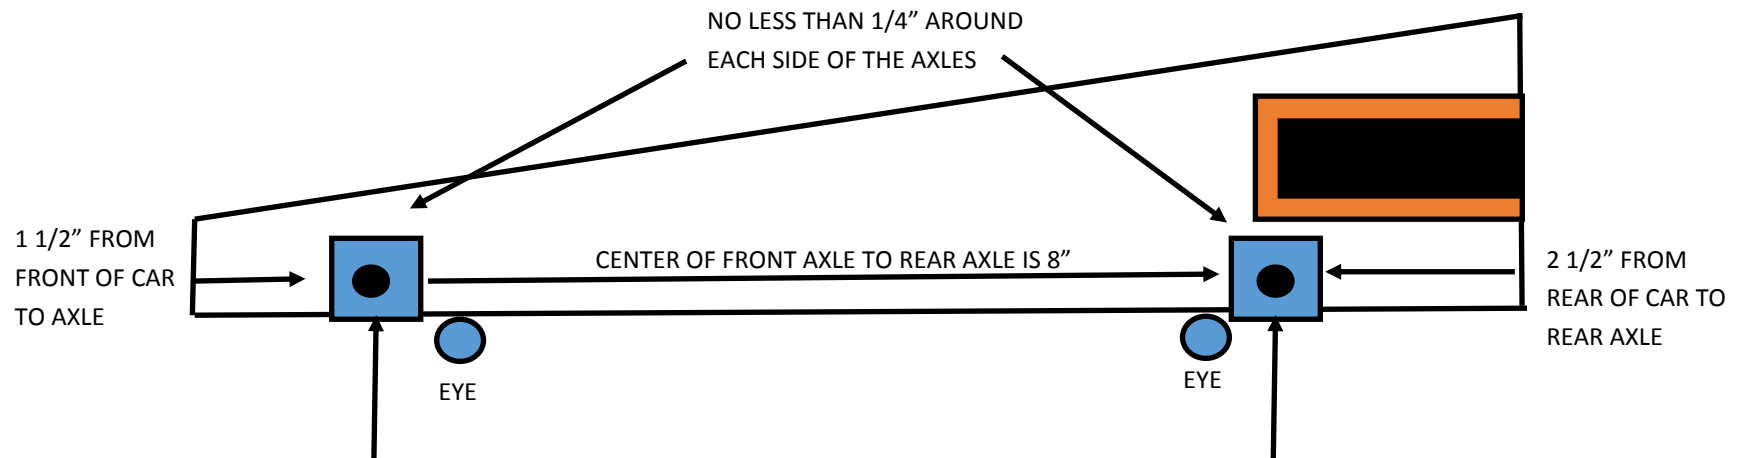


# CO2 CAR DESIGN RULES

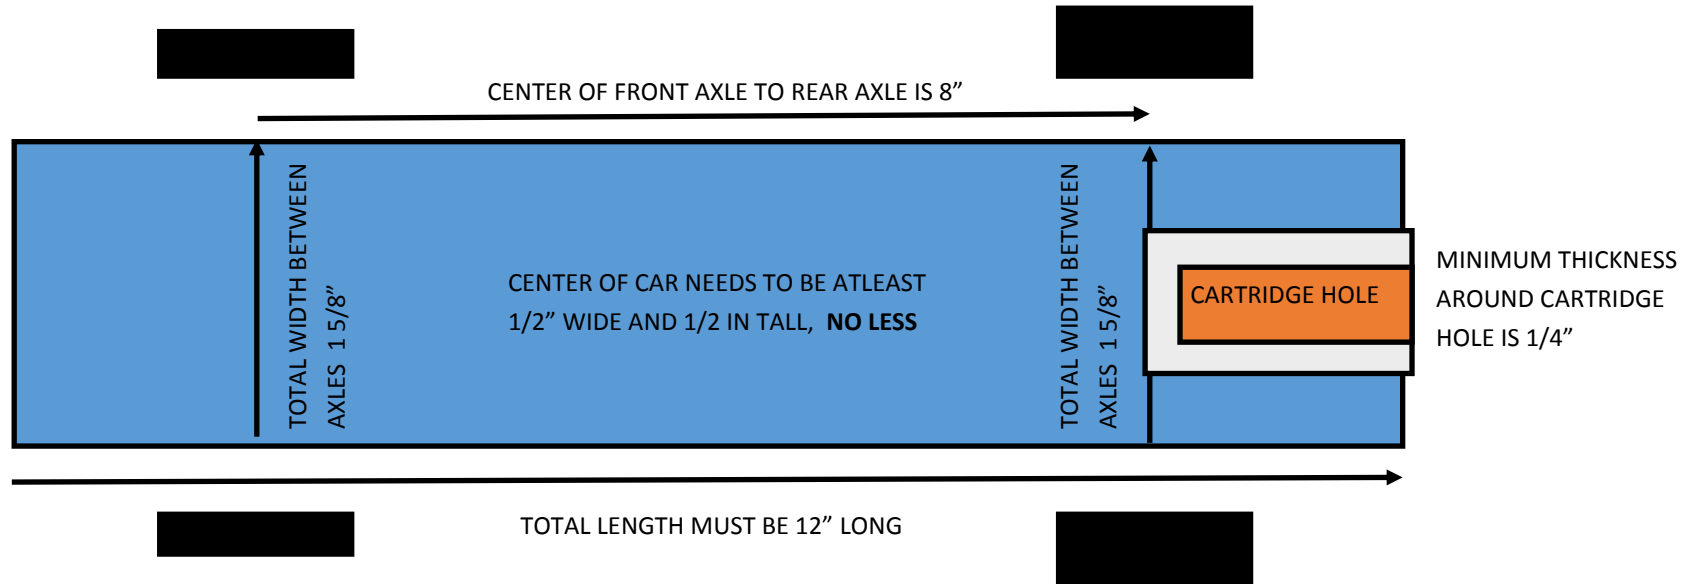

Axle holes need to be 3/16" up from bottom of wood and place eye screws as close as possible to each axle.

**ANY QUESTIONS PLEASE ASK OR CALL DUSTY @ 540-333-2566 BEFORE CUTTING.**